



Voting on Touch Screen

1) Activate Your Ballot:

- ◆ A poll worker will give you a single-use Voter Card*.
- ◆ Insert the card into the yellow slot on the touch screen machine to activate your ballot.
- ◆ The card will remain in the machine until you have completed voting.



2) Make Selections:

- ◆ When the list of choices appears on the screen, simply touch the box containing your preference.
- ◆ To change your selection, touch the box again.
- ◆ Touch the "Next" or "Back" arrows at the bottom of the screen to turn pages in your ballot.



3) Verify Selections:

- ◆ After marking your ballot, a review screen allows you to see all of your selections.
- ◆ To make a change, touch the box you would like to revise and you will be returned to the corresponding page of the ballot.



4) Cast Ballot:

- ◆ After selections have been verified, the screen will show "Cast Ballot"
- ◆ Touch "Cast Ballot" to finalize vote
- ◆ Voter card will disengage - return card to Machine Officer



*Voter Cards are not used in all Elections or Precincts - Machine Officer will activate the Machine

SEQUOIA AVC EDGE TOUCH SCREEN VOTING MACHINE



Introduced to the market in 1999, Sequoia Voting Systems' AVC Edge touch screen voting machines are freestanding units that allow voters to select their choices electronically, much like an ATM. Accurate, trouble-free, secure and auditable; the AVC Edge has a long history of success throughout the country.

The AVC Edge features a touch screen for the voter interface. It can be placed on a tabletop or assembled as a stand with its integrated legs. Voters select their choices by touching target areas on an electronically generated ballot. The display is extremely legible thanks to the large typeface on the 15-inch LCD screen. Scroll buttons give voters straight forward navigation tools for moving forward and backward through the ballot. Voters can verify their selections and change them at any time before casting their ballot. The AVC Edge will not allow voters to over-vote a ballot, thereby reducing the number of unintentionally spoiled ballots. After the polls close, the system prints polling place totals; these are stored as a permanent record – further assuring the security and integrity of the election.

Cast votes are stored in multiple locations in each voting machine to guarantee accuracy and ensure that there are numerous ways to retrieve and audit records. And like all Sequoia voting machines, the AVC Edge is completely accessible to voters with physical, vision and literacy challenges.